


Quick Start Guide

Discover EyeTV W

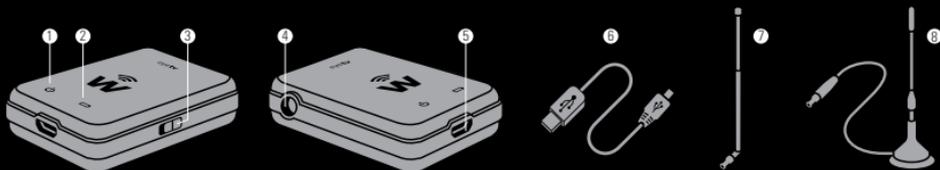

(1) Power LED

A fast blinking LED indicates that EyeTV W is starting up. The light will turn to solid blue when EyeTV W is ready.

(2) Battery LED

The battery LED turns to red when you connect EyeTV W to a power source. It turns off when the battery is fully charged. The LED is not lit when no power source is connected.

(3) Power Switch

Move down to turn EyeTV W on, move up to turn EyeTV W off.

(4) MCX Connector

Connects EyeTV W to the telescopic antenna or rod aerial that comes with your device.

(5) Micro USB Port

Recharge EyeTV W by connecting to a computer or USB charger.

(6) Micro USB Cable

Connects EyeTV W to a power source.

(7) Telescopic antenna

For best mobility. Designed for use in areas with very good reception.

(8) Rod aerial

For higher signal gain in an area with weak coverage.

Watching TV with EyeTV W

 Please make sure EyeTV W's internal battery is fully charged before using the hardware for the first time. Use the included USB cable to connect EyeTV W to a computer or USB charger.

1. Visit the App Store, Google Play or the Amazon Appstore for Android and download the free-of-charge EyeTV W app by Elgato Systems.
2. Plug the telescopic antenna into the antenna socket. Extend the antenna and swivel into an upright position.
3. Turn EyeTV W on by moving the Power Switch down. Wait for the Power LED to turn solid blue, indicating EyeTV W is ready. This will take about 10 seconds.

On your iPad or iPhone:

4. Open the settings and join EyeTV W's Wi-Fi network. The network's name will be "EyeTV W" and a number.
5. Launch the EyeTV W app and follow the on-screen instructions.

On your Android smartphone or tablet:

4. Launch the EyeTV W app. Within 10 seconds, you will be automatically connected to the Wi-Fi network broadcast by EyeTV W.
5. Perform a channel scan by navigating to the Settings and selecting "Scan Channels".



Available on the
App Store



ANDROID APP ON
Google play



Available at
amazon